REMOVES GRIME & STAINS TO REVIVE **DECKING & TIMBER**

SCRUBB Decking Cleaner is a powerful detergent formulation which cuts through grime, grease and algae to rejuvenate and restore timber decks. Also ideal for use on newly-installed decking to remove pretreatments and prepare the wood for staining or other finishing, increasing the lifetime of the final treatment.



- Rejuvenates weathered decking
- Removes ingrained & aged grime
- Prepares new decks for wood treatment

DIRECTIONS FOR USE:

Brush any dirt or loose debris from the surface, then apply SCRUBB Decking Cleaner neat, using a sprayer or watering can. Saturate the surface then work in with a stiff-bristled brush. Leave the cleaner to work for 15-30 minutes, then rinse off with a pressure washer. Allow surfaces to thoroughly dry before applying any further treatments. Coverage: up to 40 square metres per 5L.

DANGER:

Contains: Isotridecanol, ethoxylated. Causes skin irritation. Causes serious eye damage. Keep out of reach of children. If medical advice is needed, have product container or label at hand. Wash hands and exposed skin thoroughly after handling. Wear eye protection/ protective gloves. IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. Immediately call a doctor.

INGREDIENTS:

Non-ionic surfactants < 5%









5037832335401





